


 **Normeca**^A
SUPPLIER OF MOBILE HOSPITALS
Mailandvn 12, P.O. Box 404, 1470 Lorenskog - Norway
Tlf.: +47 67 92 76 00 - Fax: +47 67 92 76 92
Mail: post@normeca.no - Web: www.normeca.no

AMBULANCE BOAT



 **Normeca**^A
SUPPLIER OF MOBILE HOSPITALS
Mailandvn 12, P.O. Box 404, 1470 Lorenskog - Norway
Tlf.: +47 67 92 76 00 - Fax: +47 67 92 76 92
Mail: post@normeca.no - Web: www.normeca.no

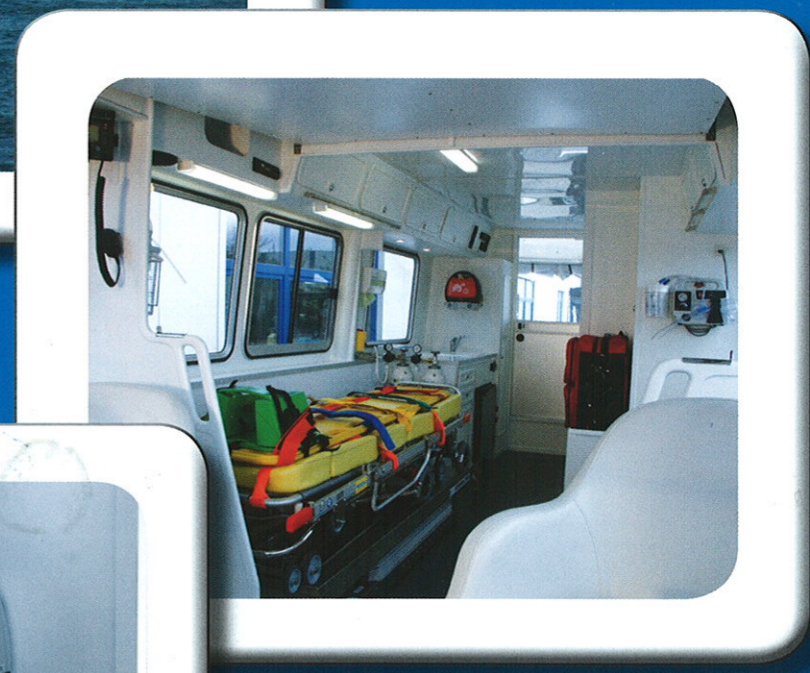

Normeca

SUPPLIER OF MOBILE HOSPITALS


Mailandvn 12, P.O. Box 404, 1470 Lorenskog - Norway
Tlf: +47 67 92 76 00 - Fax: +47 67 92 76 92
Mail: post@normeca.no - Web: www.normeca.no

INNOVATION

The ibf Fiutak GmbH is always looking for innovative solutions. Our newest project is a completely equipped Ambulance Boat converted on basis of a glider, which can be used in inland and coastal waters.

TECHNICAL DATA

Total Length:	8.45 m
Width:	2.50 m
Draft:	0.40 m
Draft with gear:	0.90 m
Headroom:	1.90 m
Fresh Water tank:	120 - 240 l
Sewage tank:	120 l
Diesel tank:	2 x 120 l
Height above water:	2.70 m
approx. weight:	3,800 kg
max. speed:	30 knots

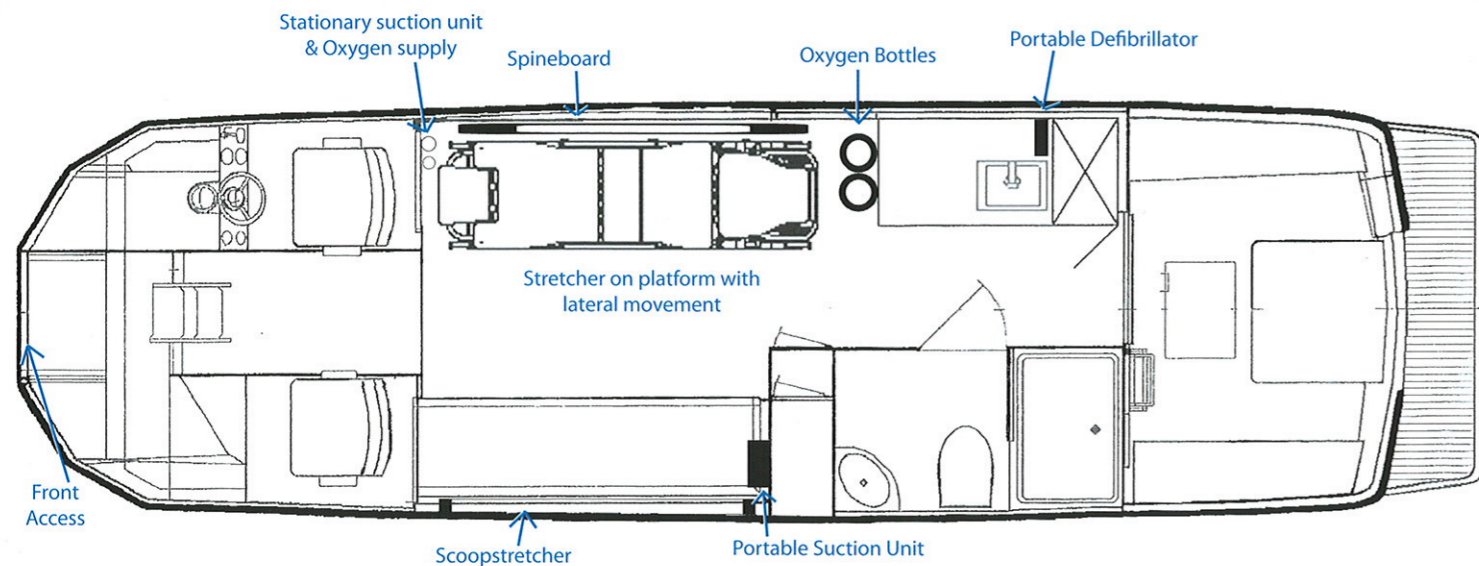

The Ambulance Boat is easy to steer due to the bow thruster and ensures fast help for the patients even in difficult to reach areas. This is why we chose a boat with a very low draft of only 90 cm, by replacing the regular Z-drive with one or two 150 PS waterjet drives the draft can even be reduced to 40 cm! Furthermore the bow of the boat can be enforced with a beaching device, giving you the possibility of landing directly on the shore, in this case the additional front access

to the boat makes the loading of the stretcher even easier. If the boat is used for longer distances we are able to add an additional long range tank of 120 l. This equals 264 nautical miles in comparison to the regular 176 nautical miles. There are also multiple choices as far as the engine is concerned. It is possible to deliver the boat with a 160 or 190 PS Z-drive or, as already mentioned, to use a waterjet drive.

FLEXIBILITY

Since customer service is our number one priority, we are able to adjust the whole interior of the boat according to your personal requirements. One option would be to include an additional hydraulic platform, so that two patients can be transported at the same time. The cabinets can be replaced by molded parts, the shower could be removed to offer even more room, we can include up to four bunks ...




There are almost endless possibilities. Since the boat itself is very versatile it can also be converted to offer many other possibilities as well.

HIGH QUALITY

The medical equipment aboard is chosen according to DIN EN 1789, ensuring the best medical care for your patient. Of course we have only included medical products of high quality, manufactured by renowned international companies.

The Ambulance Boat is additionally equipped with radar, chart plotter, UKW radio, sonar, an electronic

Volvo gearshift, a flybridge with steering and engine control, helmstand on the flybridge and inside the boat, self-bailing Cockpit, two bunks, navigation lights (BSH), electrical land connection with two circuit charging system, horn, bow thruster, one engine battery 90 Ah, two additional batteries 90 Ah each, main switch, fire extinguisher, interior lighting, electrical and manual bail pump, self-bailing anchor box in the front, anchor (Bruce type), eight boatmen clamps, four boatmen, four fenders, bathing platform with ladder, separate shower cabin, electric TECMA-toilet with holding tank, refrigerator, sink, hot/cold pressure water and a hot water boiler.

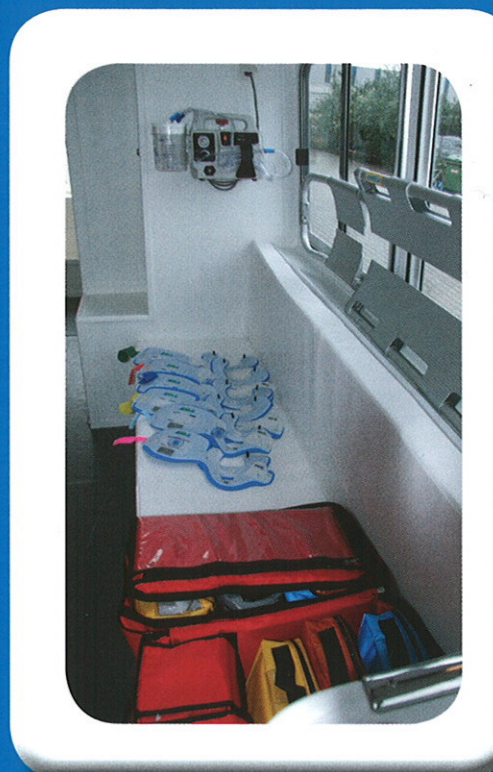

Normeca

SUPPLIER OF MOBILE HOSPITALS

Mailandvn 12, P.O. Box 404, 1470 Lorenskog - Norway
Tlf: +47 67 92 76 00 - Fax: +47 67 92 76 92
Mail: post@normeca.no - Web: www.normeca.no

Ambulance Boat



 Normeca